

## TV Mount

Your TV is fitted to an adjustable arm that can be moved to best suit your viewing position. The TV should not be removed from this arm or replaced with any other

## Stopping Screen burn

The extended use of fixed image program material can cause a permanent “shadow image” on the LCD/LED panel, also known as “screen burn”. This “shadow image” can appear in the background during normal viewing. This type of irreversible LCD/LED panel deterioration can be limited by observing the following steps:

1. Reduce the brightness/contrast setting to a minimum suitable viewing level.
2. Do not display the fixed image for extended periods of time.
3. Turn the power off when not in use.

Examples of images that are more likely to cause “screen burn” are as follows (this is not an exhaustive list):

- TV channel logos: e.g. shopping channel logos and pricing displays - especially if they are bright and stationary. Moving or low-contrast graphics are less likely to cause ageing of the screen.
- Time displays.
- TV/DVD menus: e.g. listings of DVD disc content.
- Pause mode: Do not leave the TV in pause mode for long periods of time, e.g. when watching DVDs or videos.

## Maintenance

- To clean your TV, wipe with a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth dipped in a soap and water solution or a weak detergent solution.
- Never use alcohol, paint thinner or benzene to clean the TV

## The Remote

**1**  
**STANDBY** - Switch on / off the TV  
**MUTE** - Mute the sound  
**NET+** - Access apps (like iPlayer)  
**DTV** - Switch to digital TV source  
**USB** - Switch to USB source  
**YOUTUBE** - Access the YouTube App

**2**  
**NUMBER BUTTONS** - 0-9 to select a TV channel directly.  
**TV GUIDE** - Opens the 7 day TV guide  
↺↻ return to the previous channel viewed.

**3**  
**VOL (+/-)** - To increase/decrease the sound level.  
**PICTURE** - Scrolls through picture mode options.  
**SOUND** - Scrolls through sound mode options.  
**SOURCE** - To display the input/source menu.  
**CH (+/-)** - To increase or decrease the channel being watched.  
**MENU** - To display OSD menu.  
**EXIT** - To exit all menus.  
(▲/▼/◀/▶/OK) - Allows you to navigate the on-screen menus and adjust the system settings to your preference.  
**BACK** - To go back a previous step.  
**FAV** - To display favourites menu.

**4**  
**INFO** - Press once for now/next channel information. Press twice for information about the current programme.  
**SLEEP** - Press repeatedly to cycle through the sleep options.  
**AUDIO** - To change the audio language (if available).  
**SUBTITLE** - To switch the dialogue at the bottom of the screen (on/off).  
**TEXT** - To enter/exit Text.  
**TEXT/ZOOM** - Zoom function for Teletext and DVD.  
**DISPLAY** - To switch off the screen when listening to radio



## TV Buttons



- 1 Volume up and menu right
- 2 Volume down and menu left
- 3 Programme/channel up and menu up
- 4 Programme/channel down and menu down
- 5 Displays menu/OSD
- 6 Displays the 'Input Source' menu
- 7 Standby power On/Off

## Choosing Input Source

Use the source menu to switch between input/connections such as games consoles, DVD players and laptops

### A) Using the buttons on the remote control:

 

- 1) Press [SOURCE] - The source menu will appear.
- 2) Press [V/] or [V\] to select the input you require.
- 3) Press [OK].

### B) Using the buttons on the Television:


- 1) Press [SOURCE].
- 2) Scroll up / down using CH+ / CH- buttons to the input/source you require.
- 3) Press Vol+ to change input/source to the one selected.

## Connections

Your TV comes already connected to the building TV aerial and internet service. It also has two HDMI connections linked to a separate socket further down the wall.

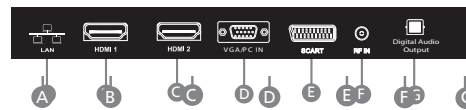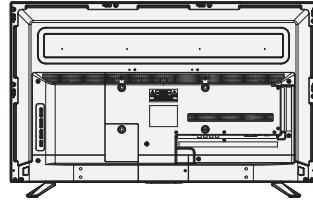

A	LAN*	Network connection
B	HDMI 1	HDMI input
C	HDMI 2	HDMI input (ARC)
D	VGA PC	VGA-PC input
E	SCART	SCART input
F	RF in	RF / TV aerial input
G	Digital audio	Digital optical audio output
H	HDMI 3	HDMI input
I	USB x 2	USB port
J	VGA PC audio in	3.5mm PC audio input
K	AV in	Audio/video input
L	CI card in	Common interface module
M	YPbPr	HD input (Ypbpr)
N	Earphones	Earphone input

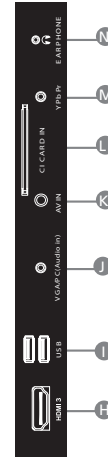 

# Your TV SHARP AQUOS



t  
audio input  
o input  
nterface module  
Ypbpr)  
input

## Quick guide

Full manual available at  
[www.unipol.org.uk/tvguides](http://www.unipol.org.uk/tvguides)

Model: LV43CFE6131K